# **NAUTIZ X9**


**QUICK START GUIDE** 



handheld

## 1 WHAT'S IN THE BOX


The pictures shown below may differ from the actual products. To purchase additional or optional products, contact our customer center.

 

Nautiz X9 Main Body



### **2** YOUR NAUTIZ X9

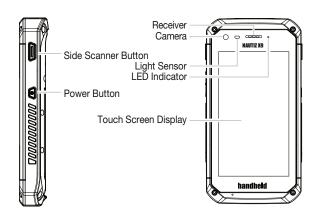



### (3) INSERT/REMOVE BATTERY

### To insert the battery

1. Insert the battery.



The battery is secured by a red slider. Move the slider to the right to unlock the battery.



2. Slide the battery lock up.



### To remove the battery

1. Slide the battery lock down.




2. Remove the battery.



## 4 INSERTING/EXTRACTING SIM/MICRO SD CARD

This is how you insert and remove the SIM/micro SD.

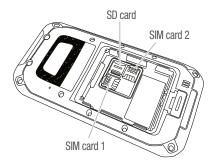

## **5** USING SCANNER

### **Using scanner**

Press the [Side Scanner] button to start scanning.





#### **Scanning Barcode**

To scan a barcode, keep a distance of about 10 cm between the barcode and the barcode scanner window and scan the barcode at the correct angle.



## **6** POWERING ON/OFF

Press the [Power] button on the side of the terminal to turn it on/off.



## 7 BATTERY CHARGING

Use supplied power adapter to charge the Nautiz X9.

Please go to www.handheldgroup.com/knowledgebase to download more information.

Google, Android and Google Play are trademarks of Google LLC.

